

**SUPPLEMENT TO PRIMAL RAGE OPERATOR'S MANUAL**  
**CHAPTER 3 - TROUBLESHOOTING AND MAINTENANCE**  
**PAGE 3-3**

**SYSTEM LOGIC ASSEMBLIES**

**\* Primal Rage Games PCB Set**

3. Disconnect the harness connectors from the game PCB and Video adjust PCB set. (There are 9 connectors in all.)